



1108

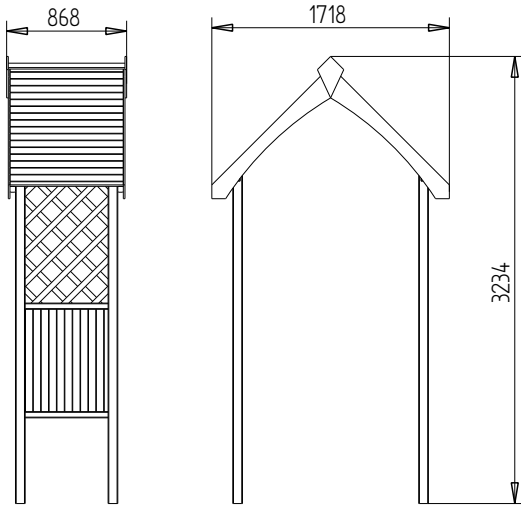

Important : Assembly of this Arch requires two people.

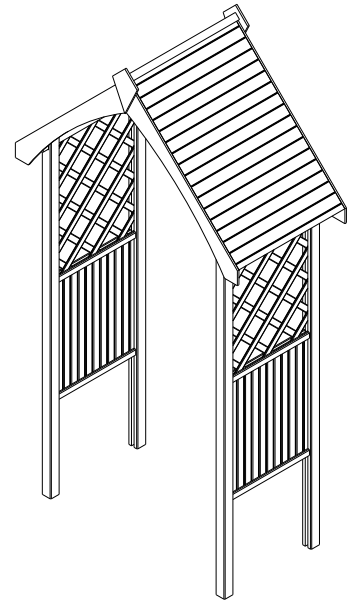


JE


Thank you for choosing this Arch manufactured by the UK's largest manufacturer of timber garden products. In order to gain the most benefit from it, please note the following:

- Exercise particular care and follow instructions.
- This Arch is pressure treated. For extra protection from the elements we recommend that you treat your structure using a wood preservative treatment. Apply in accordance with the manufacturers instructions.
- Please ensure that you thoroughly check all component parts for quantity and quality before you commence building the product. If there are any missing parts, please contact the help line as shown immediately. The manufacturer cannot be held liable for damaged items once any part of the product has been fitted or altered in any way (e.g. Painted)
- Timber is a natural material. It will shrink and swell as a result of varying moisture content.
- Please keep all plastic bags and small parts away from children in order to reduce the risk of suffocation.
- **Important Note : Do not lean or stand on rafters during assembly they are not load bearing.**
- If there are any technical queries with the product, please contact our customer help line on 0844 248 9853 between the hours of 8.30 am and 5.00 pm Monday to Friday.


If securing into place using post supports, you will need to trim 30cm (12") from the bottom of each upright.

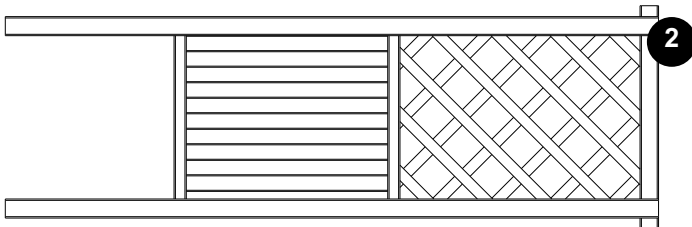


SARCHSA

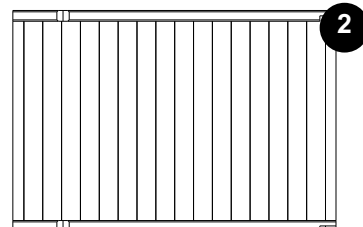


SARFS




SAFIN



SAINS163



SARC844

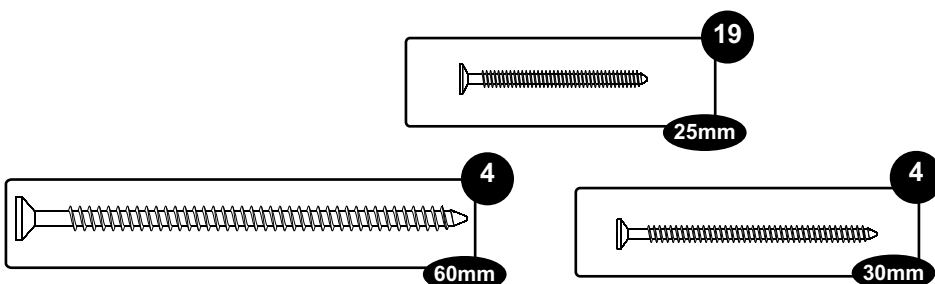



REQUIRED TOOLS : (NOT SUPPLIED)




1

Place the two **SARFS** together so that they slot together at the apex as shown.

Making sure that they are tight and flush, fix them together by screwing, from both sides, using 2x30mm screws on each join.

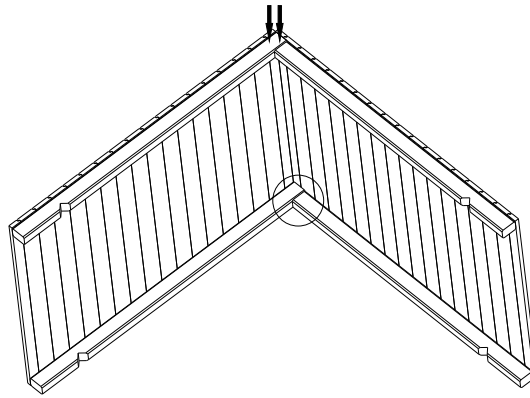

4


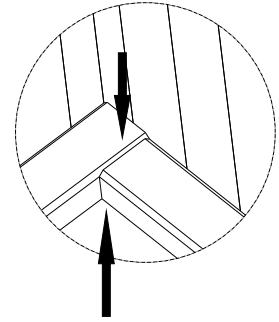


2


Lie the completed roof assembly on its side and offer the two **SARCHSA's** into the roof assembly as shown.

The notches in the rafters of the **SARF's** should sit onto the top of the **SARCHSA**.

Secure in place by screwing through the top batten of the **SARCHSA** into the **SARF** using 60mm screws.

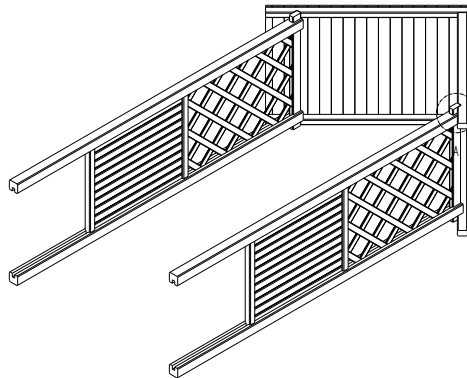


4

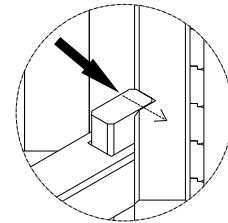

3

Place the **SARC844** onto the top of the roof and position so that it covers up the join at the apex. Secure in place using 3x25mm screws

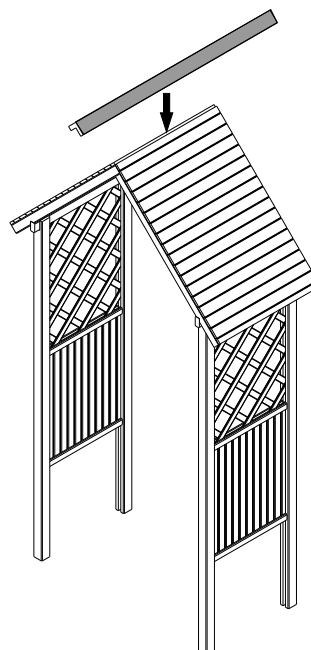


3

4




Place the **SAINS163** so that they are in line with the apex and flush with the outside of the roof.

Secure each in place using 3x25mm screws

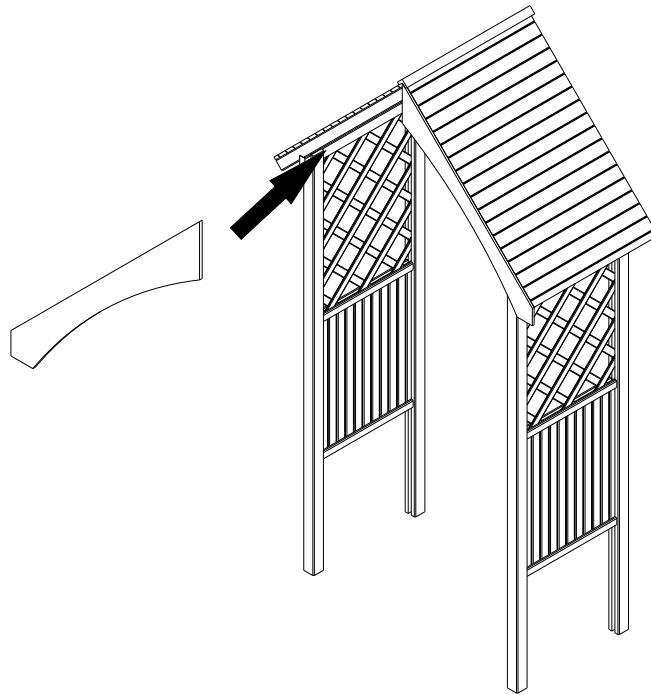


5



Place the **SAFIN** over the join of the two **SAINS163** as shown.

Secure each in place using 2x25mm screws.

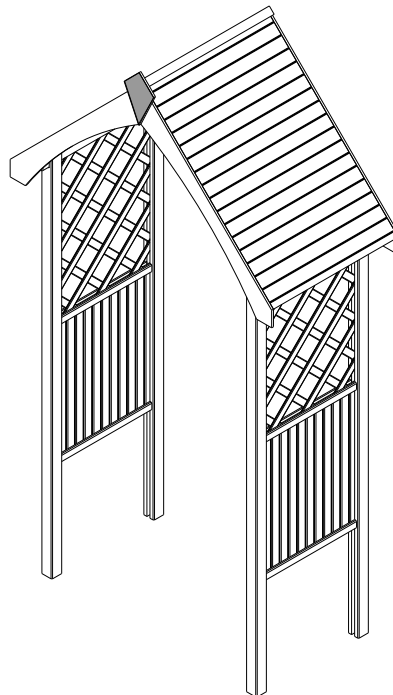

Forest Garden plc.
Units 291 & 296 Hartlebury Trading Estate
Hartlebury
Worcestershire
Dy10 4JB

Customer Services: 0844 248 9853
E-mail: info@forestgarden.co.uk

www.forestgarden.co.uk